


### Assembly to Solar Mounting Plate

As shown below, attach mailbox to mounting plate with (4) #10-24 screws and (4) #10 hex nuts. (hardware not included)

### Tools needed for Solar mounting plate

- phillips head screw driver
- adjustable wrench

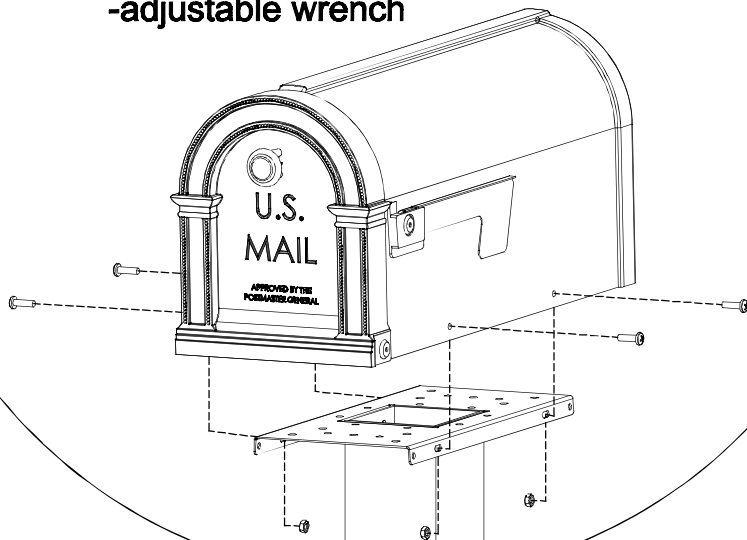

### Assembly to Pine Board

Using the holes in the side of the mailbox pre-drill holes in the wood and secure the mailbox to pine board with wood screws. (hardware not included)

### Tools needed for pine board

- phillips head screw driver
- drill

